



Konijnenhok Marianne Instructions


dsp international b.v.

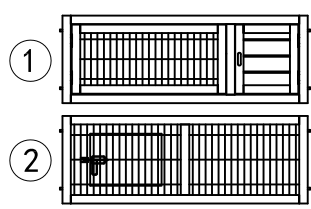



1x(up & down of front panel)

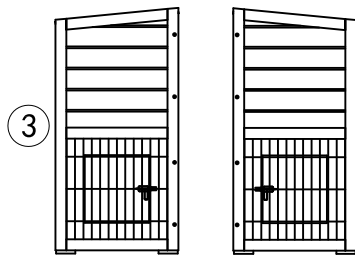


1x(Left & right side panel)

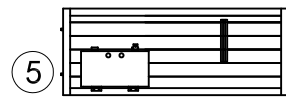


1x(up & down of back panel)

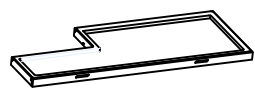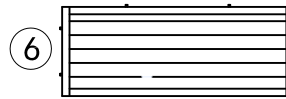


1x(tray)

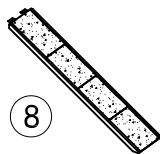

1x(ramp)

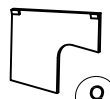

1x(partition)

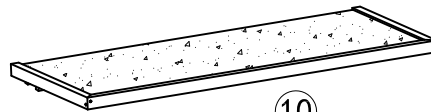


1x(roof)

A  M3. 5x50
16+1


B  M3. 0x16
36+1

C  1x


D  1x

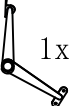 1x hinge


 4x metal latch

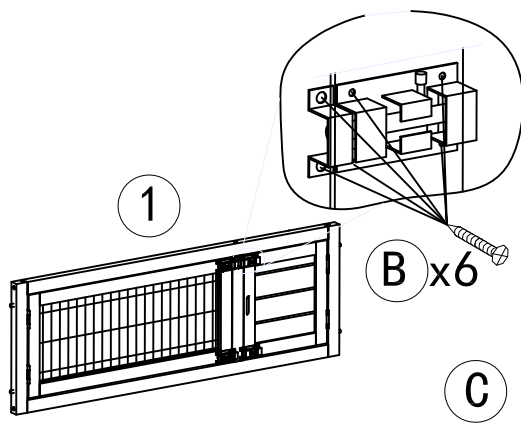


1. Drill holes to fix latches.

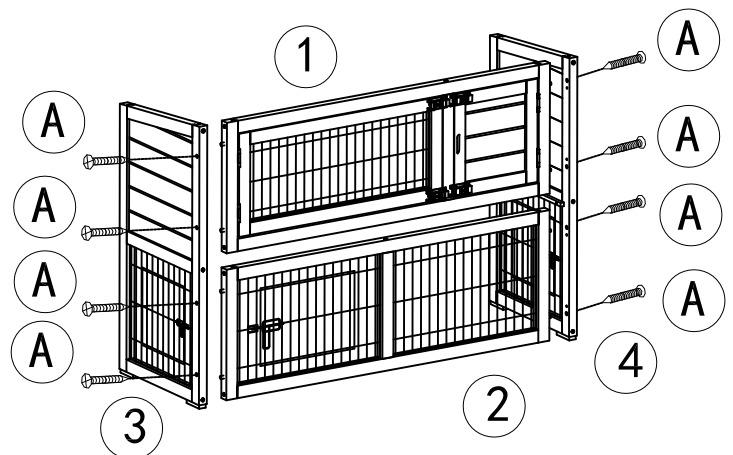


2. Fix the two side panels with the up and down of front panel.

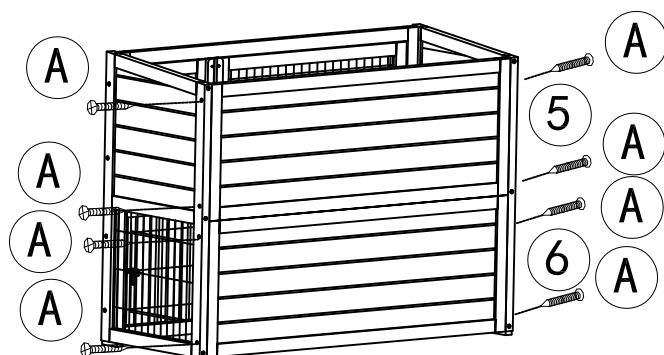


3. Fix the back panels.

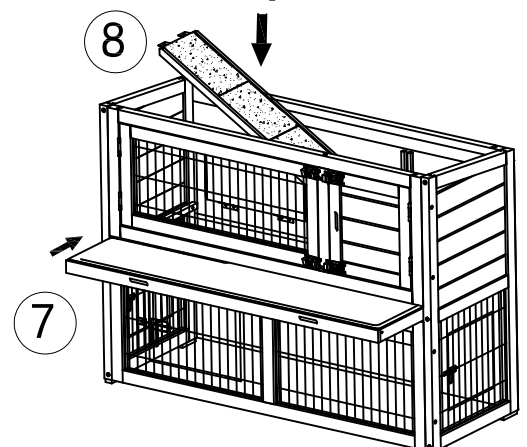


4. Insert the tray and ramp.

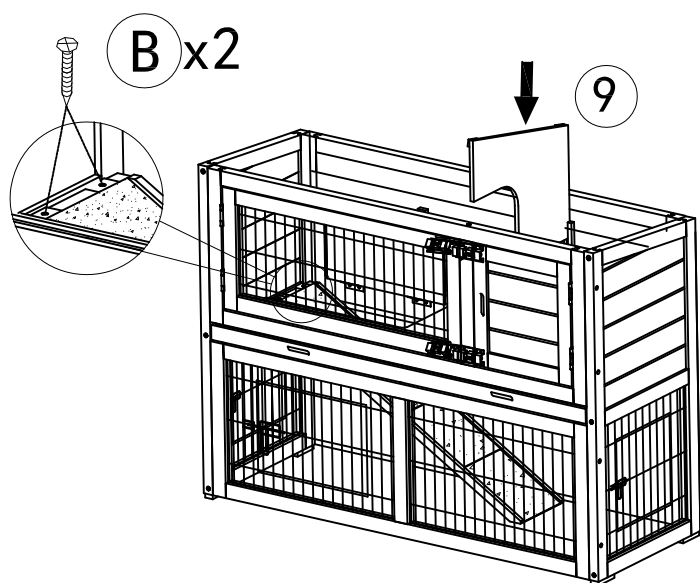


5. Insert the partition and fix the ramp.

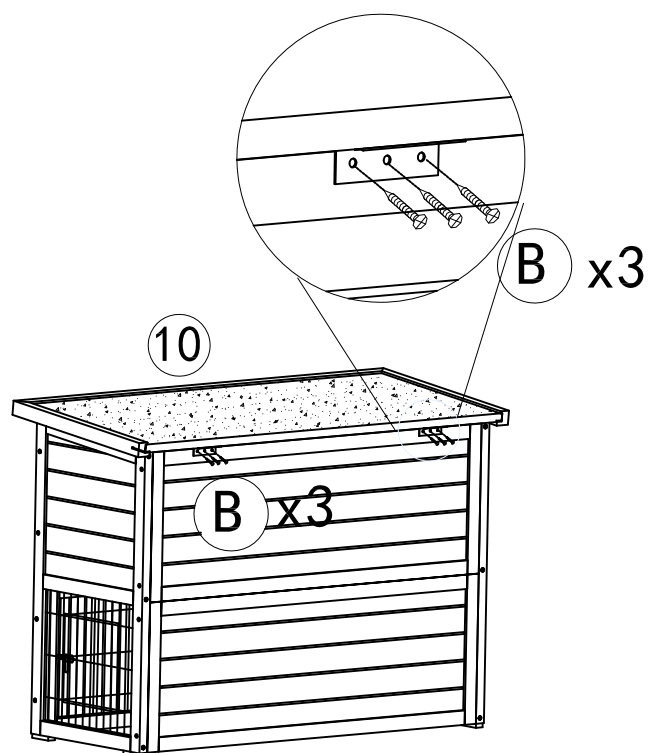

6. Fix the roof.

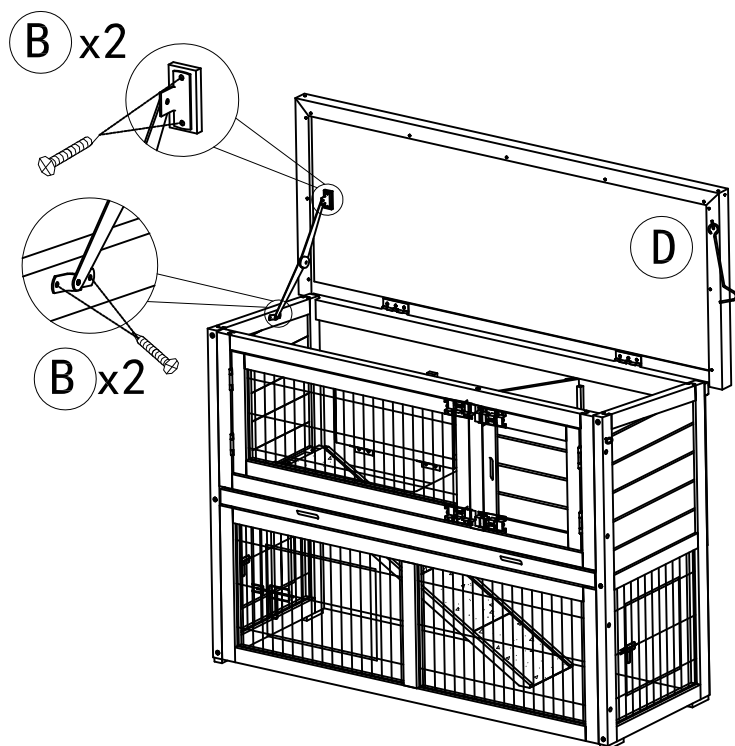

7. Fix the hinge.

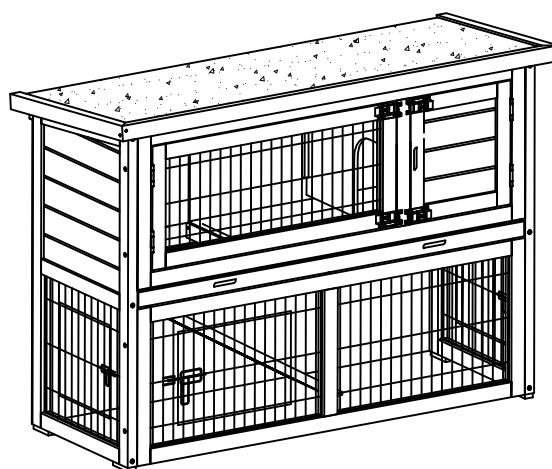

8. Finish.